



TANDBERG Gateway Installation

Unpacking


- User Manual (on CD)
- Four ISDN Cables
- Ethernet/LAN Cable
- Power Cable
- Serial Cable (RS 232)
- Screwdriver
- Accessories

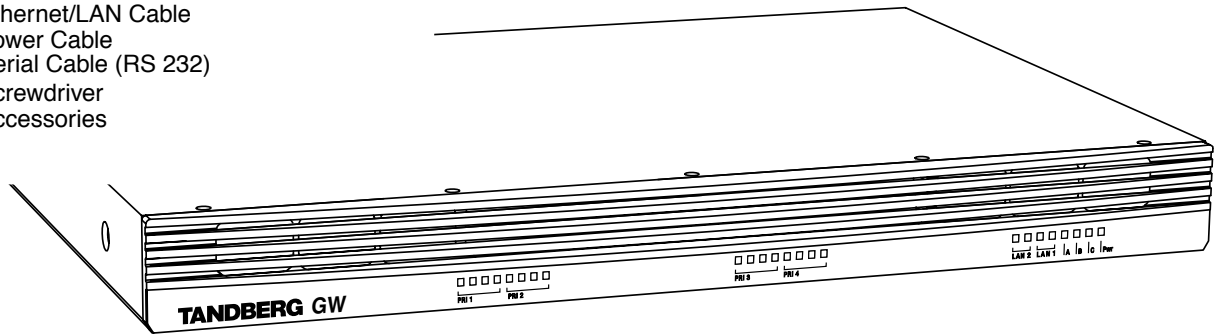

Bracket Mounting

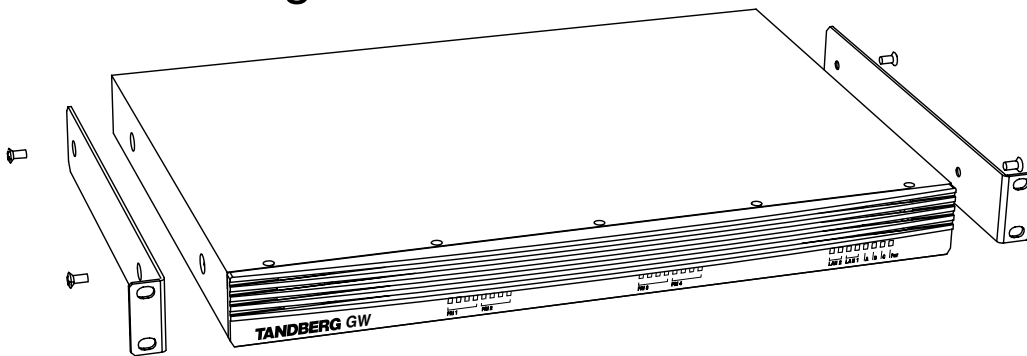

Connecting Cables

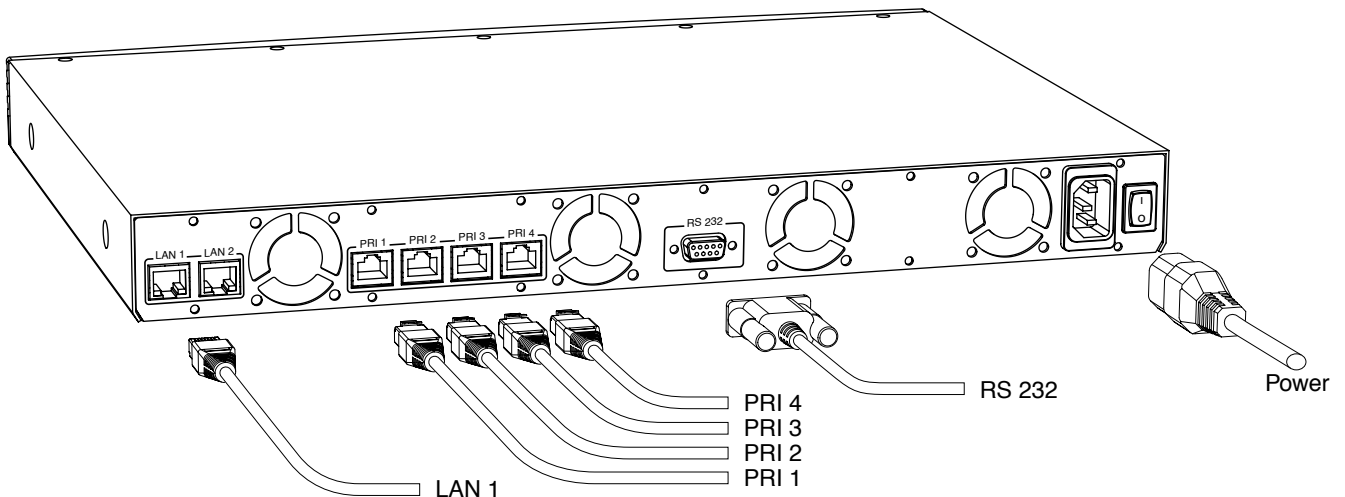


Configuration

1. Connect the RS232 cable between the gateway and a PC and then switch on the gateway.
2. Start a terminal program on the PC and configure it to: 9600, 8, 1, None.
- 3a. To assign a static IP-address, type 'ipassign static' and 'ipaddress <static IP-address>'.
3b. To assign an IP Subnetmask, type 'ipaddress subnetmask <subnetmask>'.
3c. To assign an IP Gateway address, type 'ipaddress gateway <gateway IP-address>'.
4. Restart the gateway.

TIP DHCP ASSIGNED IP-ADDRESSES ARE SUPPORTED BY THE TANDBERG GATEWAY (FACTORY DEFAULT).

5. Start a WEB browser and enter the IP-address of the gateway. Default password: 'TANDBERG'.
6. To configure the gateway for ISDN dial in, enter PRI numbers and dial in number(s). For details, see the 'PRI Configuration' and the 'ISDN Dial in configuration' section in the User Manual.
7. To configure the gateway for IP dial in, enter H.323 services and register the gateway to a gatekeeper. For details, see 'H.323 Services' and 'H.323 Configuration' in the User Manual.

Front Panel

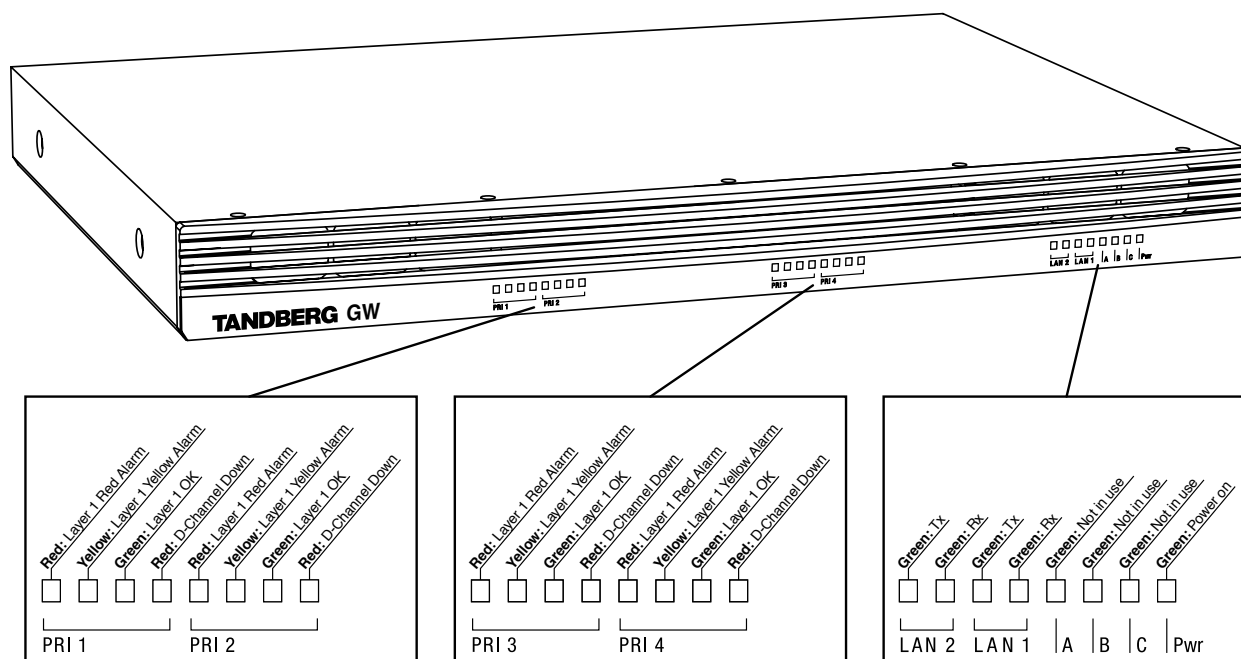

Rear Panel

