


# Tracker - User Guide

**TANDBERG**

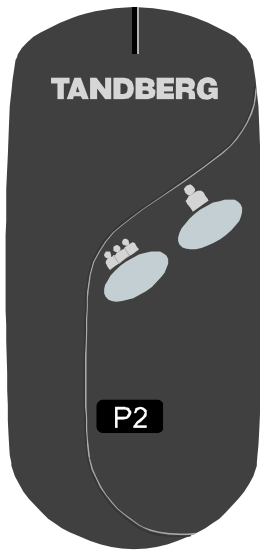

**P2**

The Tracker is designed to give all meeting participants control over self view. When participants want to send an image of themselves, they can move the camera to view their image by pressing the 'single' person button on the Tracker. To return to group view, the participants simply presses the 'group' button.

The Tracker has two buttons:




- One button (the 'Single person' button) for selecting a camera position to view the image of the person using the Tracker.



- One button (the 'Group' button) for selecting a camera position to view the image of the whole room with all participants.

## Setup

Before using the Tracker you should select and program which preset P0-P14 it should activate.

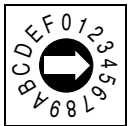

The Tracker has 16 positions which can be selected. This is done through an easily accessible switch located beneath the battery cover on the back of the Tracker. The switch functionality is as follows:

Switch position	'Single' button	'Group' button
0	P3	Graphics Freeze
1	P4	Graphics Freeze
2	P2	P1
3	P3	P1
....	....	...
9	P9	P1
A	P10	P1
B	P11	P1
C	P12	P1
D	P13	P1
E	P14	P1
F	P0	P1

**NOTE:**

'Single' person button: In positions 0 and 1 it will send the codes for P3/P4.

This should be used if you have a different video source stored on preset P3/P4 (document camera, VCR, etc).

"Group" button: In positions 0 and 1 it will send the codes for GRAPHICS/FREEZE.

After selecting which position the Tracker should activate, you should (if not already done) program the presets you want to use. Place one of the two attached stick-on labels marked P0-P14 on the Tracker (see drawing above). The other sticker with the same P-number should be placed on the table where the Tracker is located. The P-number refers to which preset the 'Single' button activates.

*Example:*

**Storing and using preset P14**

- select position E on the switch.
- adjust the camera to the position you want to store on P14.
- press STORE using the standard remote control.
- press the 'Single' button on the Tracker.